





The Human Side of Safety.[®]
Since 1898.

Spectrum Series™ Airline Respirators

Assembly Instructions for PL Spectacle Frame Assembly

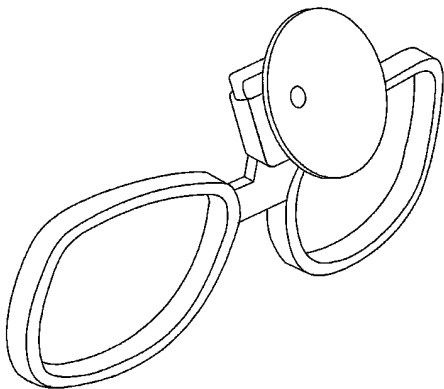




You have received a PL spectacle frame assembly for use with your Bullard Spectrum full-face mask respirator.

After having your frames filled with prescription lenses, follow these instructions for assembly:

1. Hold top of respirator with one hand.
2. Position spectacle frame assembly inside respirator so that you can see clearly through both lenses.
3. Once positioned properly, press suction cup firmly against inner lens to hold spectacle frame assembly in place.

NOTE: Make sure that suction cup is clean to prevent detachment of the frame assembly.

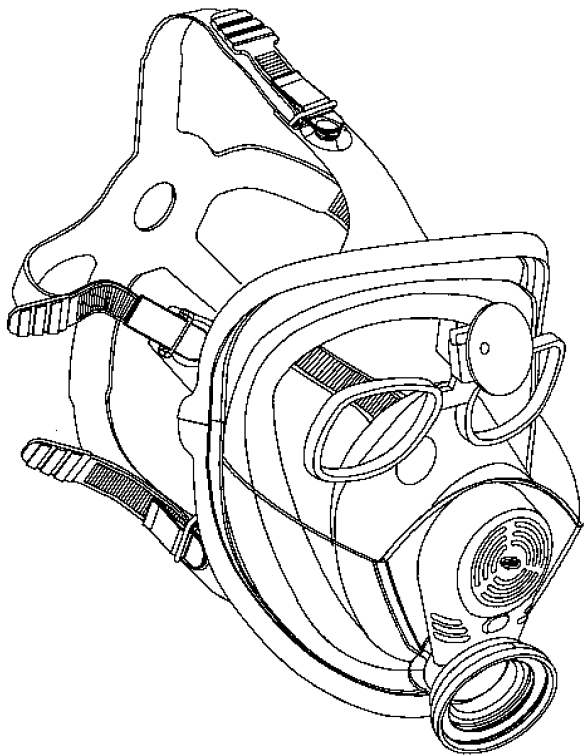

▲ WARNING ▲ : Use only NIOSH-approved Spectrum components and replacement parts manufactured by Bullard for use with the Spectrum Series™ respirators. Failure to use approved components and replacement parts voids NIOSH approval, invalidates all warranties and may cause death, lung disease or exposure to other hazardous or life-threatening conditions.



The Human Side of Safety.®
Since 1898.

1898 Safety Way
Cynthiana, KY 41031-9303
Toll-Free: 800-827-0423
Phone: 606-234-6611
Fax: 606-234-6858
www.bullard.com



Bullard is an
ISO 9001-certified company.

Copyright 1999 by Bullard. All rights reserved, including the right of reproduction, in whole or in part, in any form.